

# INSTRUCTION

## FINGER PRINT LOCK



FPL

*Quality reputed worldwide* ———  
**diplomat SAFE** 

# Finger Print Lock

- Prior to registering a user's finger print, the user must open the safe first.


Step 1 : Move lock cover to the right completely to open the battery compartment.

Step 2 : Load batteries. (1.5V AA Alkaline 4 pcs)

Step 3 : The initial code from the factory is 1 2 3 4, and press following buttons to open door.

**C → 1 → 2 → 3 → 4 → #** (Melodic tone)

Turn handle clockwise and open door.

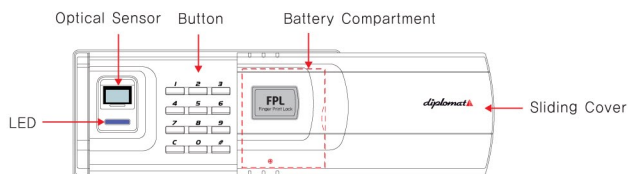

## 1. HOW TO REGISTER A USER'S FINGER PRINT ?

Step 1 : Press **M** button in the back of the door.

Step 2 : Press **3** button.

Step 3 : Press **#** button.

Step 4 : Press the user's code. (Factory initial code is 1 2 3 4)

Step 5 : Press **#** button.

(LED on, Melodic tone 3 seconds, Red flash on optical sensor)

Step 6 : Put a finger on optical sensor (LED on, Bi sound), and keep the finger print faced on the optical sensor until red flash turns off and on again and bi sounds.

(If Finger Print registered exactly, melodic tone lasts 3 seconds)

**⚠ Caution :** Prior to closing the door, confirm with the opening procedure if the finger print exactly registered.

## 2. HOW TO OPEN WITH FINGER PRINT LOCK ?

Step 1 : Move the lock cover to the right to open optical sensor part.

Step 2 : Put a finger on optical sensor.

(If the finger print is right, the lock opens with melodic tone)

Step 3 : Turn handle clockwise to open door.

⚠ Caution :

- 1) If a wrong finger print or a wrong code tried, it sounds bi-bi-bi-bi.
- 2) If wrong finger prints or codes tried over 5 times, the lock gets frozen.

- Paralysis can be released with user's code only.

In case of a user's code 1 2 3 4,

just press **C 1 2 3 4 # C 1 2 3 4 #**

(If the procedure is properly done, melodic tone rings 3 seconds)

## 3. HOW TO DELETE THE REGISTERED FINGER PRINTS ?

In opening state, press the following buttons consecutively.

**M → # → 3 → #** (Melodic tone)

All the registered finger prints are deleted.

## 4. HOW TO PUT A USER'S CODE ?

In opening state, press the following buttons in sequence.

**M → New Code (4 to 16 digits) → #**

Ex) If a user's new code is 4 4 0 0, just press the buttons

**M 4 4 0 0 #**

⚠ Caution : With opening procedure, confirm if the code exactly registered. Press buttons **C 4 4 0 0 #** (Melodic tone)

- ★ For security, please change the factory initial code (1234) to your own code.
- ★ You must keep your own code very carefully.  
Once you lost your own code, it's impossible to register your finger print.

## 5. BATTERY CHANGE ? (1.5V AA Alkaline 4 pcs)

- If door is not opened in spite that LED turns on with 3 second melodic tone, It indicates that the batteries are not strong enough to move the bolt-work. Then, four batteries must be replaced with new ones simultaneously.
- Even if batteries are completely exhausted, the registered finger prints and codes are preserved in safe condition.
- Battery Life Span : 1 year (3 times a day)



1583-4 SONGJUNG-DONG GANGSEO-GU BUSAN, KOREA TEL (82 51) 831-4400 FAX (82 51) 831-4409  
Email : [info@dsafe.co.kr](mailto:info@dsafe.co.kr) [www.dsafe.kr](http://www.dsafe.kr)

● To improve products constantly, Diplomat Safe reserves the right to alter the specifications without prior notice.  
Printed in Korea, July 02, 2007 REV: 1